


## Anti-freeze and Quantities


Anti-freeze	96% completely denatured alcohol (ethanol) or spirit
Capacity of reservoir	250 cm <sup>3</sup>

- Check fluid level of anti-freeze device at temperatures below +5 °C (40 °F) and at beginning of cold season. For this purpose, unscrew sealing screw (3b) and, if required, fill reservoir (3c) up to longitudinal knurls.

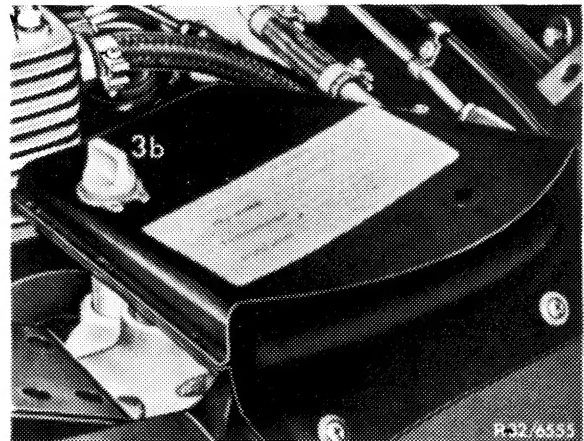

Model 100

3b Sealing screw with rubber ring seal

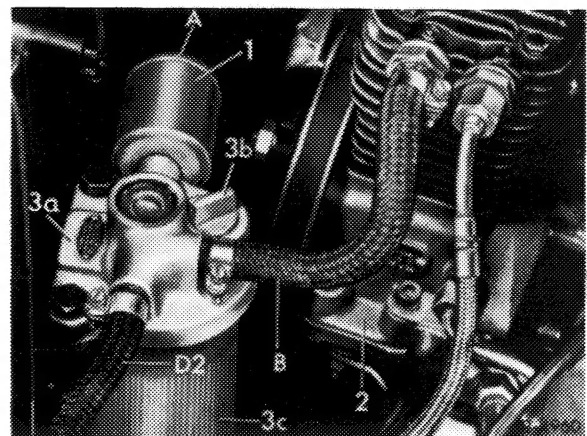

Model 109

- 1 Air filter
- 3a Valve housing
- 3b Sealing screw with rubber ring seal
- 3c Reservoir